 



### I. GENERAL DESCRIPTION

Battery Type: CR2025, 3.0V Coin  
 Case Type: Stainless Steel  
 Case Thickness: 12 mm  
 Case Width: 35 mm  
 Lens Type: Mineral Glass  
 Water Resistant: 5 ATM / 50 Meters

POWER ON DEF AULTS  
 Time: 12:00 AM (Default Format)  
 Calendar: January 01, 2008  
 Display Type: Positive Display

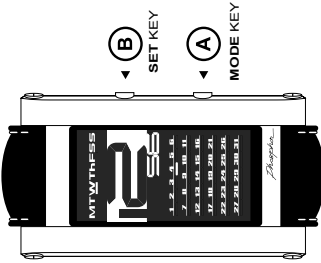
 
### III. BASIC DISPLAY MODE INFORMATION

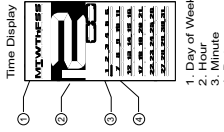

- Time Display
- Day of Week
  - Hour
  - Minute
  - Date

- Calendar Display
- Day of Week
  - Month
  - Date

#### QUICK TROUBLESHOOTING NOTES

- If the display has any problems while the two buttons are operational:
  - Remove the battery and put it back after 30 seconds, or
  - Replace the battery contact tech support: [http://www.phosphorwatches.com/visit\\_page/contact.asp](http://www.phosphorwatches.com/visit_page/contact.asp).
- If the watch does not respond to any button press, or if the display does not update:
  - Remove the battery and put it back after 30 seconds, or
  - Replace the battery contact tech support: [http://www.phosphorwatches.com/visit\\_page/contact.asp](http://www.phosphorwatches.com/visit_page/contact.asp).

### III. BUTTON OPERATION MATRIX

MODE	KEY PRESS	MODE KEY	SET KEY
TIME OF DAY	ONCE	To Date Mode	Positive/High tone
	HOLD	Time Setting	...
CALENDAR	ONCE	To Time Mode	Positive/High tone
	HOLD	Date Setting	...
MODE (Time Calendar)	ONCE	To Next Step	Information
	HOLD	Exit Setting	Fast/Information


#### Time Mode

- with all settings will automatically exit when idle for 30 seconds,
- Display will quick refresh every minute

#### Calendar Mode

- Date format is Day/Month/Date
- First setting field is YEAR, with a 2000-2099 coverage
- Date setting will automatically exit when idle for 30 seconds, with all setting changes saved


### IV. TIME SETTING MODE

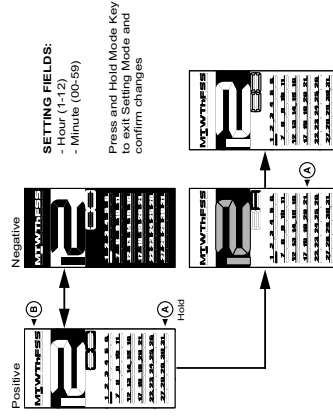

SETTING FIELDS:  
 - Hour (1-12)  
 - Minute (00-59)

Press and Hold Mode Key to exit Setting Mode and confirm changes

### V. CALENDAR SETTING MODE

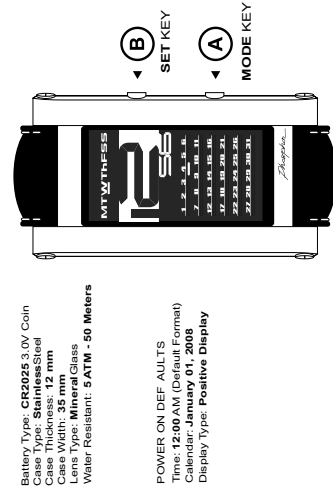

SETTING FIELDS:  
 - Year (00-99)  
 - Date (01-31)

Press and Hold Mode Key to exit Setting Mode and confirm changes

### WARRANTY

Your PHOSPHOR brand watch is warranted by ART TECHNOLOGY for a period of 1 year from the date of purchase under the terms and conditions of this warranty. This warranty covers material and manufacturing defects. During the warranty period the E-INK display and digital movement, and watch movement and hands are the only components covered under this warranty. These will be replaced or the watch will be repaired (at the sole discretion of ART TECHNOLOGY) without charge. This warranty does not cover damage to the watch caused by accident, misuse, or workmanship under normal use. A \$ 10.00 return shipping and handling fee applies to all warranty (excluding California and non-warranty services).

The warranty does not cover:

- Battery, crystal, strap or bracelet
- Water damage unless marked water-resistant
- Wear and tear
- Loss of case, accidents or normal wear and tear
- Water damage unless marked water-resistant
- Damage caused by accident, negligence, unauthorized service, or other factors not due to defects in materials or workmanship.

If the problem is not covered by warranty or if your warranty has expired, the service and repair charges are as follows:  
 - \$ 5.00 Battery replacement; this includes return shipping and handling fee  
 - \$ 25.00 Total charges for repair of all components not covered under warranty; this includes the return shipping and handling fee.

Visit [www.phosphorwatches.com](http://www.phosphorwatches.com) for the shipping address and contact info for warranty repairs or other support issues.



E-INK and E-INK logo are registered trademarks of E-INK Corporation. Phosphor logo and Phosphor are trademarks of Art Technology, Ltd.  
 Made in China

FMT138 rev.4



phosphor™

E-INK E Ink On Every Smart Surface